



Removing the Camera Set Screw from the HD Tripod

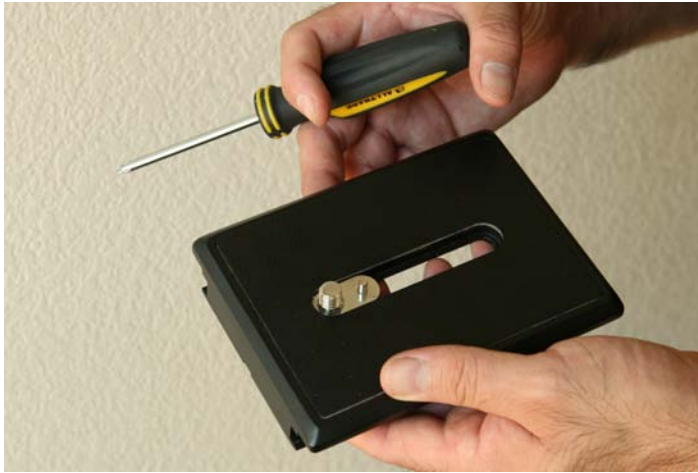

1

Remove the quick release plate from the tripod head . You will need a Phillips screwdriver for the next step.

Flip the quick release plate over and use the screwdriver to take out the set screw in the center of the handle.

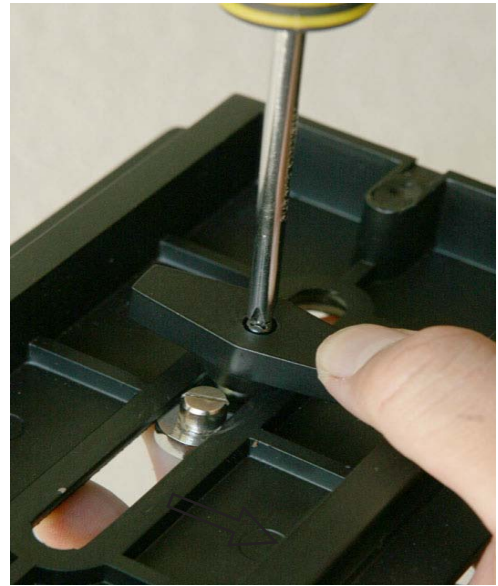

2



3

After removing the set screw unscrew the handle and remove it also.

The camera mounting screw can now be removed. If you are mounting a teleprompter our mounting bolt can now be inserted in the channel where the camera mounting screw had been.



4