

# Studio 17 Set-Up Sheet

(Clean beamsplitter with included yellow microfiber cloth)

**Important Note:** You must attach the channel locks provided with this unit to prevent possible breakage of your glass beamsplitter. Failing to attach the locks may void your warranty. The locks are provided to secure the trapezoidal beamsplitter firmly to the frame. Please view the setup sheet and assembly videos provided.

1

Slide beamsplitter frame onto the top rail.



2

Secure beamsplitter frame with wing nuts.



3

Place LCD on frame.



Secure LCD to frame with thumb screw on bottom.

4

Secure sled to tripod plate with bolt set provided.



5

Instructional videos for assembling the hood and mounting the trapezoid frame are located on the Flip-Q CD, or can be accessed online at the following addresses:

[http://www.prompterpeople.com/studio17\\_hood\\_setup.php](http://www.prompterpeople.com/studio17_hood_setup.php)

[http://www.prompterpeople.com/studio17\\_hardware\\_setup.php](http://www.prompterpeople.com/studio17_hardware_setup.php)



Completed assembly of teleprompter with camera.

6

To balance the teleprompter, place a pen under the unit with the camera and all parts attached. Move back and forth to find the balance point. Attach your tripod quick release plate at this point.

